

Manual – car transporter

General information

1. The information contained in the content is current as at the date of its preparation.
2. The producer is the company juzjade.pl Rafał Klimek located in Radlin at Rybnicka 108 (Poland).
3. The manufacturer reserves the right to introduce constructional changes in the manufactured bodies to facilitate operation and improve the quality of their work, without making current changes in the description.
4. Before using user must read the contents of this manual and observe all recommendations contained therein. This will guarantee safe operation and ensure trouble-free operation of the body. It was built in accordance with applicable standards, documents and current legal regulations. The manual describes the basic principles of safe use and operation of our platforms. If the information contained in the user manual is not fully understood, please contact the Manufacturer for assistance.

Way of usage

1. The juzjade.pl platform is designed for transporting cars and materials with similar parameters (weights, dimensions, weight distribution, pressure). Using it in a different way than described above is not allowed. Intended use also includes all activities related to proper and safe operation and maintenance.
2. The platform must not be used contrary to its purpose. In particular, it is prohibited to:
 - transporting people, animals, hazardous materials, loads that aggressively affect the structure chemically,
 - carrying an improperly secured load that could cause road and environmental pollution while driving, which could change its position while driving, the location of the center of gravity negatively affecting the stability of the vehicle, which affects uneven loading and / or overloading of the axles and suspension components.
3. Before loading, you should:
 - apply the handbrake, secure the car against self-moving,
 - if the car is equipped with pneumatic suspension, it should be lowered as much as possible,

- unblock and unfold ramps (the foot lever is on the right in the rear of the body, push it towards the cabin),
- check that the car is placed on level ground or is not excessively tilted to one side, which can make loading difficult.

4. After loading, make sure that the load:

- will not cause exceeding the permissible axle loads of the vehicle on the road,
- will not affect the stability of the vehicle,
- will not hinder driving,
- will not restrict the visibility of the road or will not obstruct the lights, signaling devices, number plates or other plates or signs with which the vehicle is equipped.

5. Load placed on the vehicle should be secured against moving or causing excessive noise.

6. Equipment (straps) used for securing the load should be secured against loosening or free hanging down while driving.

7. In case of covering more than 50% of the surface of the front or rear position lights, direction indicators or reflectors, other road users should be warned about the presence of the vehicle on the road, e.g. by means of a warning triangle or other device in accordance with the requirements of the given country regarding the use of the vehicle in motion road.

8. Operation of the winch and work lighting is not allowed while driving.

9. Additional conditions that the load must meet can be found in Road Traffic Law.

10. If our load meets all the requirements and is properly attached to the platform:

- fold up the ramps and block them with a lever (push the foot lever towards the rear of the vehicle and make sure the ramps are blocked),
- supplement the pressure in the air suspension system using the manometer (the distance between the wheel and wheel arch should be suggested),
- check the correct operation of the lighting,
- release the handbrake.

11. A separate instruction manual is provided for other devices installed in the vehicle, e.g. winch.

12. All additional conditions described in the Guarantee Terms apply.